



VENT & OVERFLOW

VENT & OVERFLOW TABLE		
SERVICE PIPE SIZE	DIMENSIONS	
	X	Y
3/4"	4"	3"
1"	4"	4 1/2"
1 1/2"	5"	6"
2"	6"	7"
3"	7"	10"
* 4"	7"	10"
* 6"	7"	15"
* 8"	7"	20"

* 2 OPENINGS REQUIRED

REQUIREMENTS

1. NO TAPS, TEES OR OTHER CONNECTIONS OF ANY KIND ARE PERMITTED BETWEEN THE WATER METER AND RECEIVING VESSEL.
2. THE OVERFLOW OPENING AND SCREEN SIZE SHALL BE AS SHOWN ON THE VENT AND OVERFLOW TABLE OR OF GREATER CAPACITY AS REQUIRED TO MAINTAIN THE SPECIFIED AIR GAP SYSTEM.
3. PROTECTION FROM FREEZE DAMAGE MAY BE NECESSARY IN EXPOSED AREAS.